

# Clarke®

## COIL SPRING COMPRESSOR SET

MODEL No: CHT 454

Part No: 1801454



 
### GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase. This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

# COMPONENTS

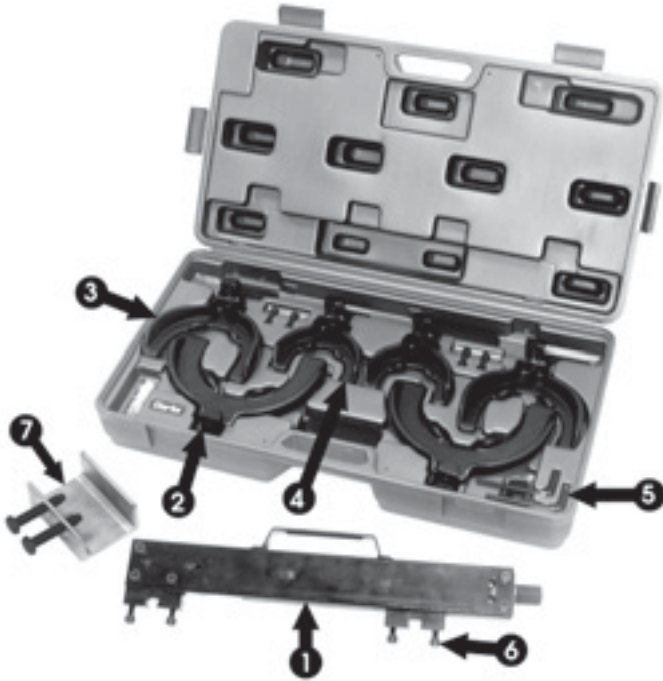

1. Screw Clamp
2. Large Claw 140-200mm
3. Medium Claw 100-140mm
4. Small Claw 67-100mm
5. Hex. Writench 6mm
6. Hex. Socket Head Screw 6mm
7. Clamp

Part No.
ZHCHT45401
ZHCHT45402
ZHCHT45403
ZHCHT45404
ZHCHT45405
ZHCHT45406
ZHCHT45407

**Clarke**  
INTERNATIONAL


**Parts & Service: Tel: 020 8988 7400**

 **Clarke** International, Hemnall Street, Epping, Essex CM16 4LG


## METHOD OF USE

Select the appropriate claws to suit the coil spring, and attach to the screw clamp, securing with the hex. socket head screws, using the hex. socket wrench provided. Spare screws are also provided if required.

Turn the clamp nut on the end of the clamp, (see Fig.1) to position the claws so that they may be inserted between the coils as shown, ensuring the coils bed into the claws fully.

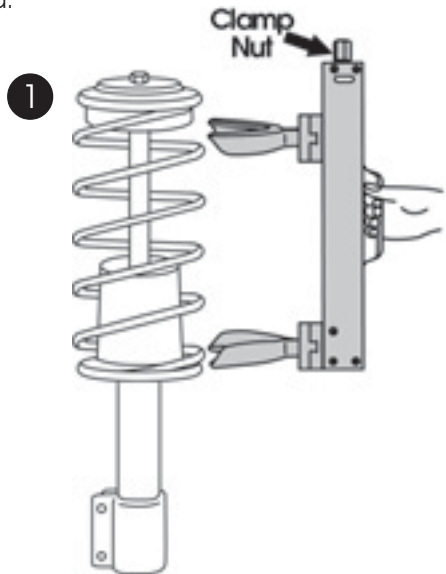

 Continue to turn the clamp nut so that the clamp assembly is firmly attached to the coil spring assembly, then attach the complete unit to a table top using the clamp provided, as shown in Fig.2.

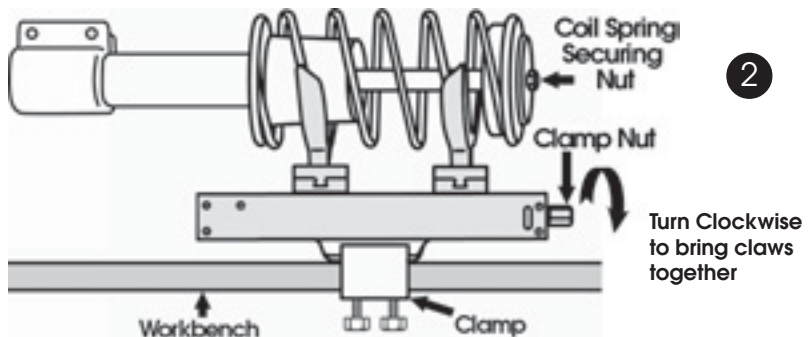

Once secured, turn the clamp nut to bring the claws together, thereby compressing the coils. Eventually, pressure on the shock absorber securing nut will be completely relieved, detected when the nut turns easily. **WARNING!** DO NOT turn the nut until this condition exists.

With the nut removed, the shock absorber may be withdrawn