

Clarke®



Only suitable for well insulated areas and not designed
to be the primary heat source

2.8KW ELECTRIC FAN HEATER

MODEL NO: DEVIL 2800

PART NO: 6925800

OPERATION & MAINTENANCE INSTRUCTIONS



ORIGINAL INSTRUCTIONS

GC1119 Issue 6

INTRODUCTION

Thank you for purchasing this CLARKE product. Before attempting to use this product, read this manual carefully. In doing so you guarantee the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused, tampered with, or not used for the purpose for which it was intended. Faulty goods must be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

SPECIFICATIONS

Operating Voltage / Frequency	230V / 50Hz
Operating Temperature Range	-15 to +25°C
Input Wattage:	
Fan + Heat 1	1000W
Fan + Heat 2	2000W
Fan + Heat 3	2800W
Required Power	12.5 - 13.6A
Max Air Output	450 m ³ /h
Safety Devices	Thermal cut-out Tip-over switch
Ingress Protection	IPX4
Depth x Width x Height	200 x 220 x 335 mm
Weight	3.8 kg
Sound Pressure Level	45 dB

**THE FOLLOWING TABLE ADDRESSES THE INFORMATION
REQUIREMENTS OF REG.2015/1188**

Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input for electric storage local heaters only	
Measured seasonal space heating energy efficiency		36%		Manual heat charge control with integrated thermostat	No
Nominal heat output	P _{nom}	3.0	kW	Manual heat charge control with room and/or outdoor temperature feedback	No
Minimum heat output (indicative)	P _{min}	1.5	kW	Electronic heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max}	3.0	kW	Fan assisted output	No
Auxiliary electricity consumption				Type of heat output/room temperature control (select one)	
At nominal heat output	e _{lmax}	N/A	kW	Single stage heat output, no temperature control	No
At minimum heat output	e _{lmin}	N/A	kW	Two or more manual stages, no temperature control	No
In standby mode	e _{lSB}	N/A	kW	With mechanical thermostat temp control	Yes
				With electronic temperature control	No
				Electronic temperature control with day timer	No
				Electronic temperature control with week timer	No
				Other control options (multiple selections possible)	
				Room temperature control with presence detection	No
				Room temperature control with open window detection	No
				Room temperature control with distance control option	No

	Room temperature control with adaptive start control	No
	Room temperature control with working time limitation	No
	Room temperature control with black bulb sensor	No

SAFETY RULES

Make sure that you read, understand and comply with the following.



WARNING: THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED AREAS AND IS NOT DESIGNED TO BE THE PRIMARY HEAT SOURCE.

SAFE WORKING PRACTICES

- DO NOT operate the heater when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- DO NOT stand on the heater.
- DO NOT use the heater with wet hands or when there is water on the power cable.
- Turn the heater off when not in use and keep it in a safe, dry location.

The heater is designed to heat enclosed areas larger than 4m³, such as workshops and other industrial areas. Do not use the heater for any other function. It is not suitable for drying clothes or laundry.

ELECTRICAL SAFETY



WARNING: THIS HEATER MUST BE EARTHED

- Regularly inspect the power cable / plug for signs of damage/looseness. Do not use the heater if the power cable is damaged.
- Minimise the risk of electric shock by installing a RCCB (Residual Current Circuit Breaker) and a suitable isolator into the main distribution board.
- Make sure that the voltage on the rating label is the same as the voltage of the power supply. If in doubt, consult a qualified electrician.

- Do not abuse the electrical cable. Never use the cable for pulling or unplugging the heater.
- Keep the cable away from sources of heat, oil, sharp edges or moving parts. Damaged or tangled cables increase the risk of electric shock.
- Do not use extension cables with this heater.

POSITIONING



WARNING: DO NOT USE THE HEATER NEAR FLAMMABLE MATERIAL, LIQUIDS, SOLIDS, GASSES OR COMPRESSED GAS CYLINDERS ETC.

- This heater is designed for indoor use only.
- DO NOT place the heater close to any water-filled area or wet surface.
- DO NOT place the heater against any surface such as a wall, door or furniture etc.
- DO NOT place the heater immediately below any electrical outlet.
- NEVER place the heater near combustible materials. Allow at least 2 metre clearance.
- DO NOT place the heater on a raised surface or anywhere where it could topple over.
- Always ensure that the grille cannot be blocked.
- Do not operate fan heaters in explosive atmospheres such as in the presence of flammable liquids, gasses or dust such as in a paint spray booth or any explosive environment. Electric motors create sparks which may ignite dust or fumes.

OPERATION

- The heater must only be used by people who have read these instructions and have been trained in its use.
- DO NOT obstruct the air inlet and outlet sections of the heater.
- DO NOT cover the heater with anything that could restrict the air flow.
- DO NOT touch the heater casing or grille when first switched off, as these will be very hot and will take time to cool.
- DO NOT get the heater wet or use in areas of high condensation.
- DO NOT allow the power lead to touch hot surfaces.
- DO NOT connect other appliances to the same mains socket as the heater.

- Only use the heater in a level position.
- Do not use this heater with a programmable timer used to switch it on automatically.
- Do not leave the heater unattended.

MAINTENANCE.



WARNING: DISCONNECT THE HEATER FROM THE POWER SUPPLY BEFORE ANY SERVICING OR MAINTENANCE. THIS MUST ONLY BE CARRIED OUT BY THE CLARKE SERVICE DEPARTMENT.

- Check that the heater is in good working order. Take immediate action to have any damaged parts repaired or replaced by the Clarke service department.
- Do not allow the heating elements to become covered with dust which could become a fire hazard. If used in a dusty workplace it should be cleaned as described under Maintenance.
- Only recommended parts should be used. Unapproved parts may be dangerous and will invalidate the warranty.
- Have your heater repaired by a qualified person using identical replacement parts. This will ensure that the safety of the heater is maintained.

SAFETY SYMBOLS

These safety symbols appear on the heater.

	<p>Hot Surface, Do Not Touch</p>	<p>DO NOT COVER</p>	<p>Do Not Cover</p>
	<p>WEEE Directive for the disposal of waste electrical & electronic equipment</p>		

ELECTRICAL CONNECTIONS



WARNING: READ THESE ELECTRICAL SAFETY INSTRUCTIONS THOROUGHLY BEFORE CONNECTING THE HEATER TO THE MAINS SUPPLY.

Connect the mains lead to a standard, 230 Volt (50Hz) electrical supply through an approved 13 amp BS 1363 plug, or a suitably fused isolator switch. If the plug has to be changed because it is not suitable for your socket, or because of damage, it must be removed and a replacement fitted, following the wiring instructions shown below. The old plug must be discarded safely, as insertion into a power socket could cause an electrical hazard.




**WARNING: THE WIRES IN THE POWER CABLE OF THIS PRODUCT ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:
BLUE = NEUTRAL BROWN = LIVE YELLOW AND GREEN = EARTH**


If the colours of the wires in the power cable do not agree with the markings on the plug,

- The BLUE wire must be connected to the terminal which is marked N or coloured black.
- The BROWN wire must be connected to the terminal which is marked L or coloured red.
- The YELLOW AND GREEN wire must be

Plug must be BS1363/A approved.

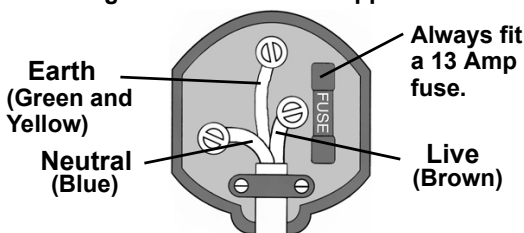

Ensure that the outer sheath of the cable is firmly held by the clamp

connected to the terminal which is marked E or  or coloured green.

We strongly recommend that this machine is connected to the mains supply through a Residual Current Device (RCD)

If you are not sure, consult a qualified electrician.

ENVIRONMENTAL RECYCLING POLICY



Through purchase of this product, the customer is taking on the obligation to deal with the WEEE in accordance with the WEEE regulations in relation to the treatment, recycling & recovery and environmentally sound disposal of the WEEE.

In effect, this means that this product must not be discarded with general household waste. It must be discarded according to the laws governing Waste Electrical and Electronic Equipment (WEEE) at a recognised disposal facility.

OPERATION










WARNING: DO NOT USE THIS HEATER IN SMALL ROOMS IF OCCUPIED BY PERSONS NOT CAPABLE OF LEAVING THE ROOM ON THEIR OWN, UNLESS CONSTANT SUPERVISION IS PROVIDED.

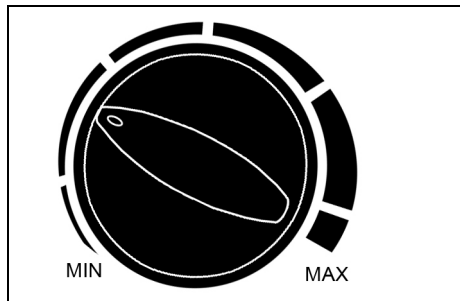


CAUTION: SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.

1. Put the heater in a level position on a flat surface and at a safe distance from flammable materials. Keep a minimum of 2m clearance all round.
2. Connect the heater to a suitable power supply.
3. Set the thermostat control to the maximum setting (fully clockwise).
4. Set the mode selector to one of the 3 settings:



0	Off
 	Fan + Heat Setting 1
 	Fan + Heat Setting 2
 	Fan + Heat Setting 3

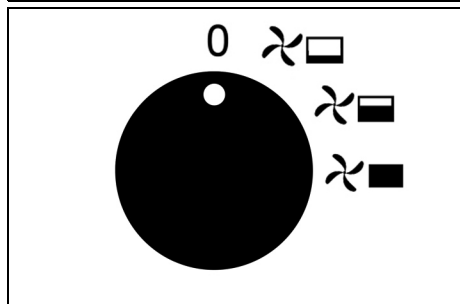

- The heater will take up to three minutes to reach optimum temperature.

5. Once the room reaches the required temperature, turn the thermostat control slowly counter-clockwise until the thermostat clicks. Leave the control in this position.
 - The room temperature will be maintained at this setting. The heater will continue to operate until the power switch is turned to the OFF position.
6. When not in use, disconnect the heater from the mains supply. Store it in a safe, dry, childproof location.

SAFETY SYSTEMS

The Devil 2800 has a thermal cut out to prevent the unit from overheating.

If the temperature of the front grille gets too high the thermal cutout will turn off the heating elements. When the fan has cooled the unit sufficiently, normal operation will resume.

In the event of the heater falling over, the tip-over switch will cut off the power until it is set upright again.

MAINTENANCE




WARNING: ALWAYS DISCONNECT FROM THE POWER SUPPLY AND ALLOW THE HEATER IT TO COOL DOWN BEFORE PERFORMING ANY MAINTENANCE TASKS.

- Clean the heater with a soft damp cloth, Do not use solvents or abrasives.
- Make sure that the heater grill is not blocked.
- No other maintenance is required, should you discover any problem with the heater, return it to the Clarke service department for repair.

FAULTFINDING

Problem	Possible Cause	Remedy
Heater does not operate, although plugged in with the switch and thermostat switched on.	Plug is loose/bad connection.	Pull the plug out & check the connection of the plug and socket.
	Fuse blown or circuit breaker trips.	Replace if necessary and investigate cause. If fuse blows repeatedly, consult your Clarke dealer.
	No power at socket outlet	Insert the plug in a functioning socket.
Heating element glowing hot.	Input voltage too high.	Use a power supply in accordance with the rating on the label.
	Air inlet grille is blocked	Ensure the heater is kept away from any objects which could cover the air inlet or be drawn into it.
Heater has failed to heat up so only the air fan has operated.	Thermostat has tripped.	Turn the thermostat and listen. If there is no CLICK and the thermostat is not damaged, the heater will automatically switch ON when it has cooled down.
Abnormal noise.	Heater is not level.	Stand heater on a level surface

DECLARATION OF CONFORMITY



Clarke
INTERNATIONAL
Hemmoß Street, Esping, Essex, CM16 4AG

DECLARATION OF CONFORMITY

This is an important document and should be retained.

We hereby declare that this product(s) complies with the following directive(s):

- 2014/30/EU Electromagnetic Compatibility Directive.
- 2014/35/EU Low Voltage Equipment Directive.
- 2011/65/EU Restriction of Hazardous substances.


The following standards have been applied to the product(s):

- EN 60335-1:2012+A11:2012, EN 60335-2-30:2009+A11:2014, EN 62233:2008
- EN 61006-3-2:2014, EN 61006-3-3:2013, EN 55014-1:2006 +A1:2009 +A2:2011,
- EN 55014-2:1997 +A1:2001 +A2:2008

The technical documentation required to demonstrate that the product(s) meet(s) the requirement(s) of the aforementioned directive(s) has been compiled and is available for inspection by the relevant enforcement authorities.

The CE mark was first applied in: 2017


Product Description: 2.8 kW Fin Heater
Model number(s): Dev2850
Serial / batch Number: 6028500
Date of issue: 12/05/2017



J.A. Clarke
Director

Page 1 of 1
11-04-2017 Dev2850 Rev01, Iss: New, D14 C

PARTS LIST & DIAGRAM

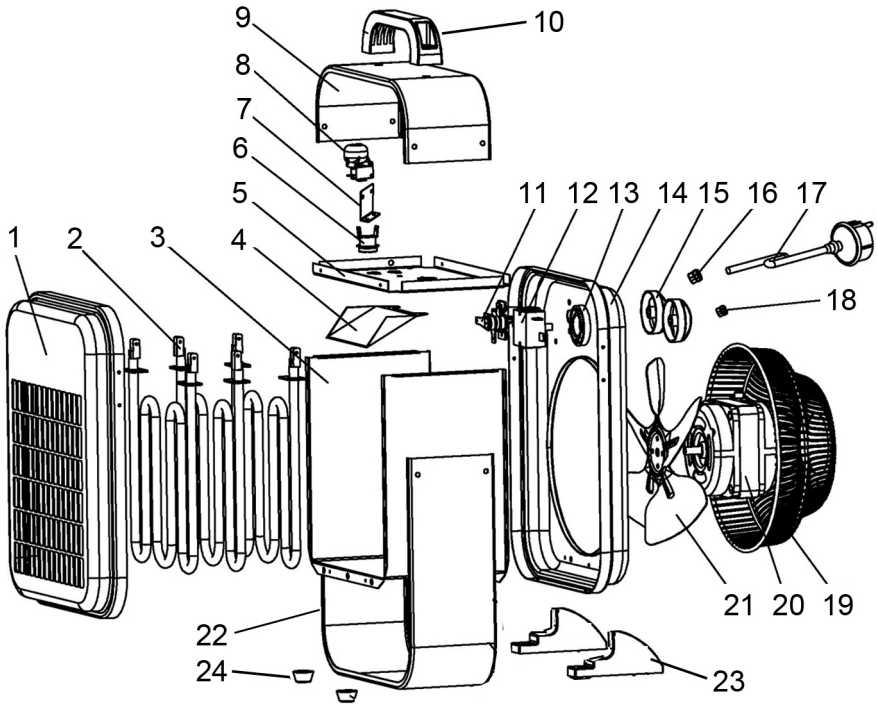

1	Front Cover
2	Heating Element
3	Thermal Baffle
4	Thermostat Cover
5	Middle Panel
6	Thermostat Re-set
7	Bracket
8	Tip-over Switch / Bracket
9	Top Cover
10	Handle
11	Adjustable Thermostat
12	Switch

13	Waterproof Ring
14	Rear Cover
15	Knob
16	Cable Fastener
17	Power Cable
18	Cable Fastener
19	Rear Grille
20	Motor
21	Fan
22	Bottom Cover
23	Rear Foot
24	Front Foot

When requesting spare parts, refer to the part number = (ZNBDEV2800 + the number of the part) shown

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS


Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.

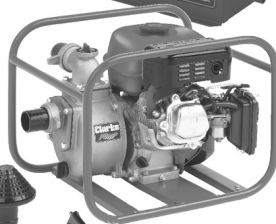

PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com